

Armrest Installation Instructions

ATTENTION:

Do not attempt armrest installation before verifying that you have the correct parts and application. For best results, please read these instructions thoroughly before starting installation. We also recommend the use of safety glasses while working on your vehicle.

PART NUMBER:

15 2104 Armrest Installation Kit, 7 series thru 87, Vinyl Armrest

15 3104 Armrest Installation Kit, 7 series thru 87, Leather Armrest

7 Series

THRU 87
STANDARD SEATS

PROCEDURE: (See figures 1 & 2)

Note: In order to install the armrest, the driver's seat must be reclined and pushed back in order to gain access to the screws. With the seat reclined, both screws cannot be removed at the same time, otherwise the back of the seat will pull away from the bracket. To install this armrest as quickly as possible, follow the instructions below.

1. Move the driver's seat all the way back and recline it so that the head rest almost touches the back seat.
2. Remove the screw and plastic covering on the right-hand side of the driver's seat (See figure 1, shaded area) to expose the mounting bracket.
3. Remove the top screw only from the mounting bracket and save. *Note: Do not readjust seat while screw is out.*
4. Line up the armrest bracket's top screw hole (See figure 2) with the mounting bracket's top hole and affix with one of the screws supplied. Do not tighten screw all the way.
5. Pivot the armrest bracket counter-clockwise so as to gain access to the bottom screw. Remove the bottom screw. Return the armrest bracket so that the bottom holes line up and affix the other screw supplied. Tighten down both screws sufficiently.
6. Slide the armrest onto the shaft of the armrest bracket.
7. Return the back of the seat to its upright position.
8. Undo the zipper at the back of the armrest and separate the center of the foam enough to see the slot on the right side of the metal tube.
9. Line up the slot with the hole in the shaft and tap in the roll pin supplied, until it is about 1/16" from being flush.
10. Close the foam and redo the zipper.
11. Once the armrest is installed, the screw and plastic covering removed in Step 2 are no longer used.

7 Series

THRU 87
STANDARD SEATS

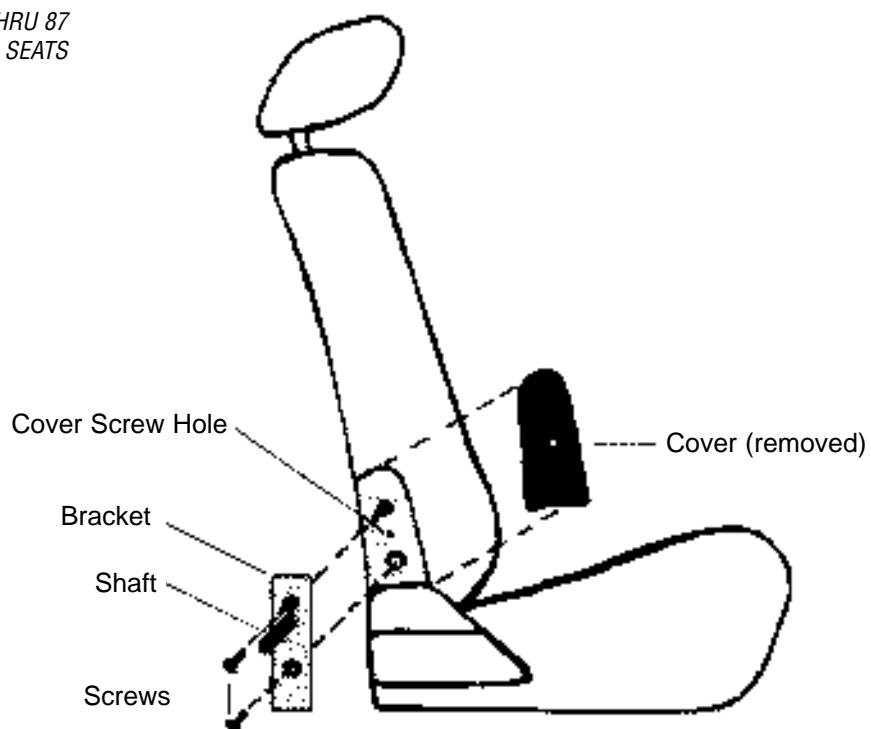


Figure 1

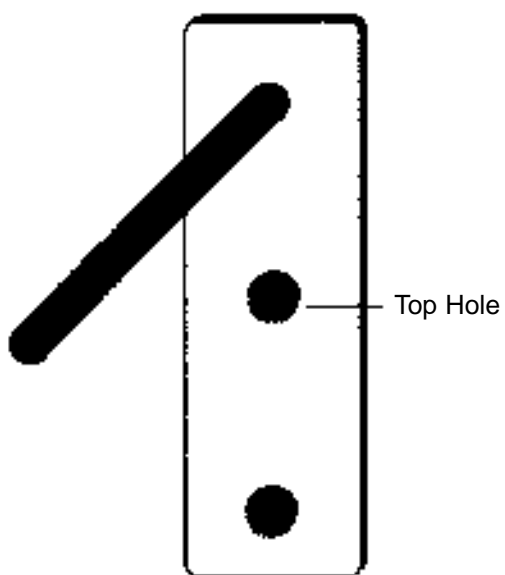


Figure 2